


SF-2587-** INSTALLATION DIAGRAM

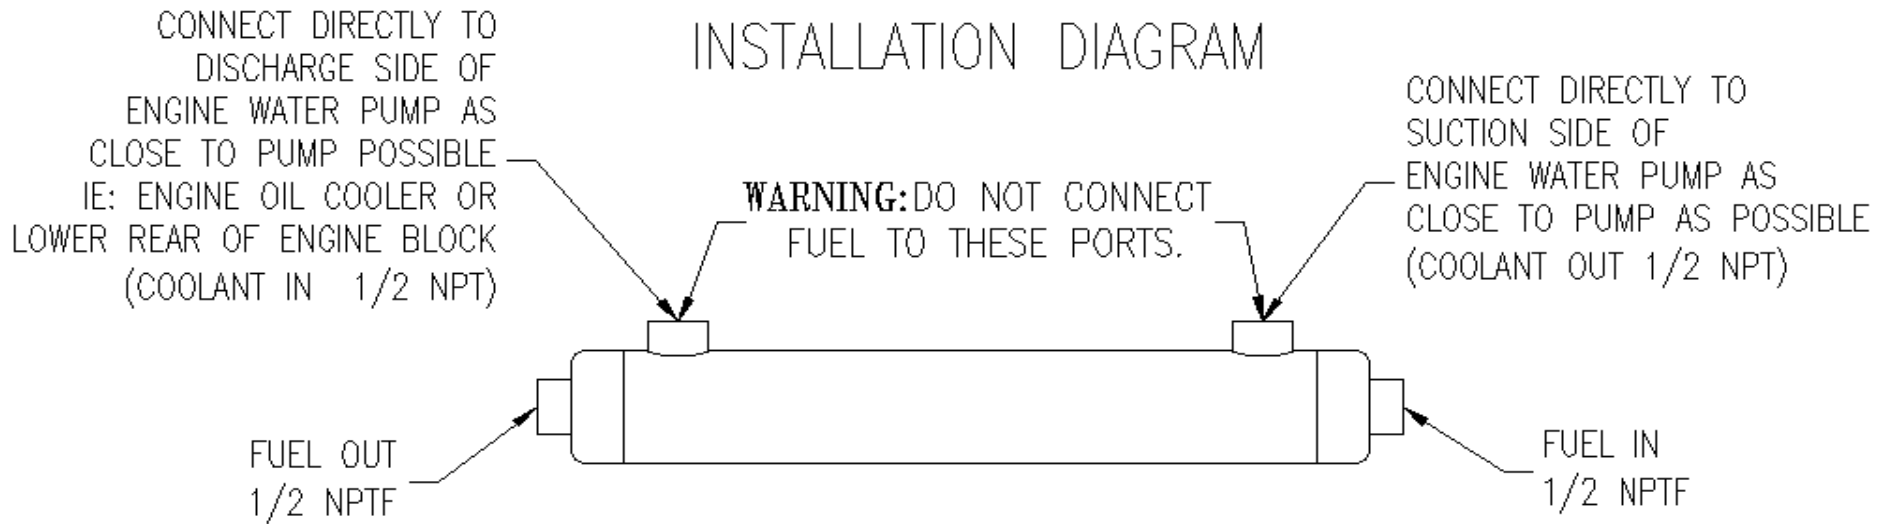

1. DO NOT MOUNT SF-2587 HEAT EXCHANGER TO ENGINE OR POWER TRAIN. MOUNT ONLY TO VEHICLE FRAME USING HARDWARE PROVIDED BY ARCTIC FOX, INC.
2. SEAL FUEL & COOLANT PIPE THREADS USING APPROPRIATE SEALANTS FOR THE APPLICATION.
3. PLEASE NOTE THAT "FUEL IN" & "COOLANT IN" MUST BE AT OPPOSITE ENDS.
4. IT IS RECOMMENDED THAT FUEL & COOLANT CONNECTING LINES ARE FLEXIBLE. IF USING HARD LINES, "U SHAPED" OR "CIRCULAR" STRESS RELIEFS PER INDUSTRY STANDARDS MUST BE FORMED IN .065" MAXIMUM WALL THICKNESS LINES. DO NOT PLUMB THICKWALL STRAIGHT HARD LINES DIRECTLY TO SF-2587-**.

WARNING: MAXIMUM RECOMMENDED SERVICE LIFE OF THE SF-2587-** IS 6 YEARS FROM THE DATE OF MANUFACTURE AS LABELED ON THE DEVICE. REPLACE WITH A NEW SF-2587-** WHEN DEVICE HAS REACHED 6 YEARS OF SERVICE.

ARCTIC FOX, INC.
P.O. BOX 309
570 SOUTH 7TH STREET
DELANO, MN 55328

EMAIL: INFO@ARCTIC-FOX.COM
USA PHONE: 800-654-5382
USA FAX: 763-972-2873

B-591 Rev. 02/12